


# Dust Shroud Assembly Instructions

Secure the required collar to shroud with the supplied screws & nuts.

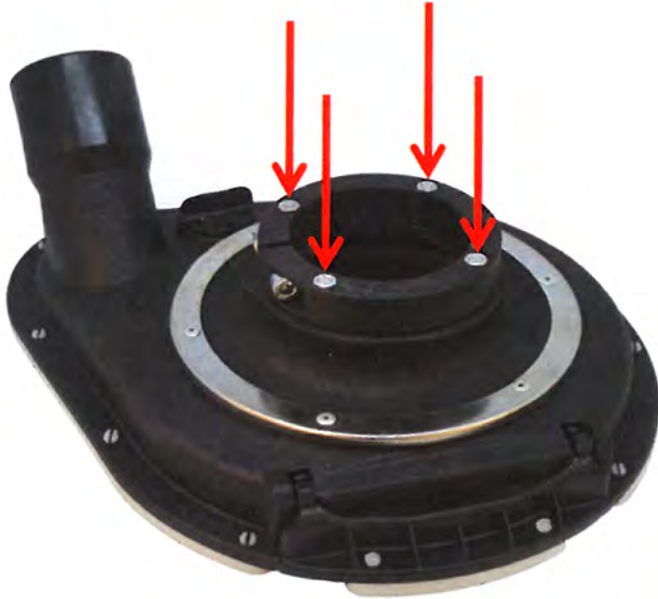

Examples of collars available  
(other types and custom designs also available for various grinder brands)



# Dust Shroud Assembly Instructions

## Option A

Always use the grinder supplied inner flange



## Option B

For some grinder models that require special collars, place the optional grinder spacer on top of the grinder supplied inner flange.



Never use the grinder supplied large cutting flanges! It will tear the rubber diaphragm.



## Option A

Place diamond cup grinder wheel on top of the inner flange and then secure it with the grinder supplied outer flange.

Lip goes up.



## Option B

Place the Diamond Cup grinder wheel on top and secure it with the optional angle grinder nut.



The Diamond Cup Grinder wheel should sit flush to the bottom of the wear strip or deeper.



Replace the nylon wear strip prior worn out.